


INSIDE OF DOOR

LHR SHOWN
RHR OPPOSITE


BACKSET CENTERLINE
(SEE EXIT DEVICE TEMPLATE)

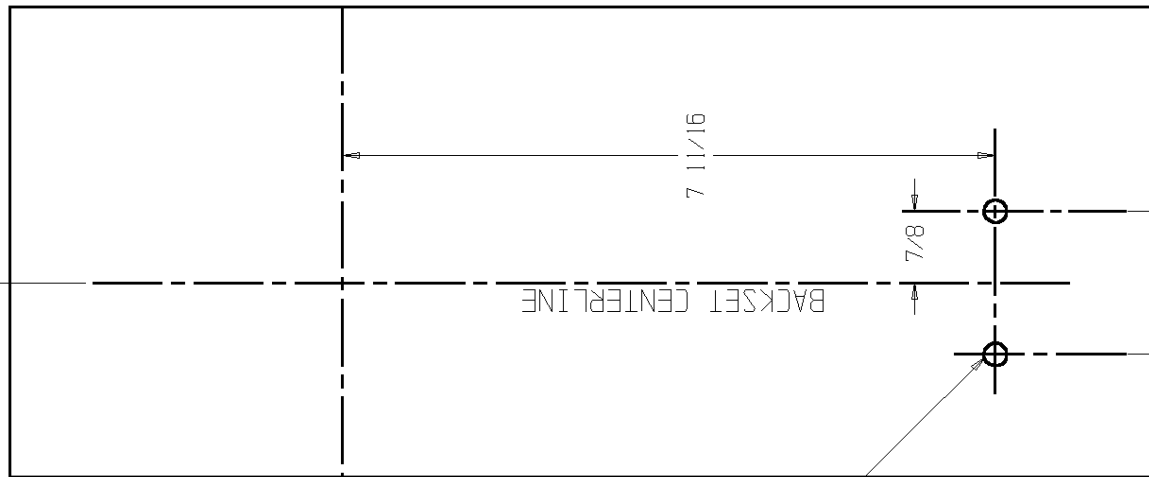

DRILL 1/4
(2 REQ'D)

OUTSIDE OF DOOR

BACKSET CENTERLINE
(SEE EXIT DEVICE TEMPLATE)

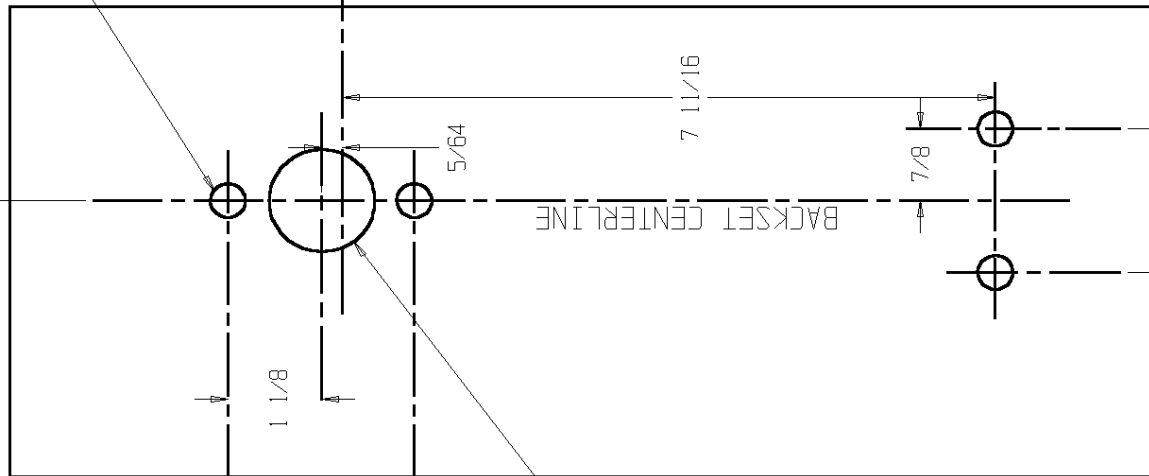

DRILL
Ø 3/8
(4 PLCS)

Ø 1 1/4
x 1 1/4
DEEP HOLE
(IF CYL.
IS USED)

ADAMS-RITE MANUFACTURING COMPANY
CITY OF INDUSTRY, CA 91749

3001/3002 FIXED PULL
FOR 3100/8100 SVR,
WOOD, OR HOLLOW METAL DOORS

PART NO.:
80-0180-216

NOTE: SEE MASTER SHEET 10001
FOR SUGGESTED REINFORCEMENT

TEMPLATE NO.:
20015-0

DATE:
08/23/95