



LHR ONLY

* SEE 8700 TEMPLATE FOR PREP DIMS.

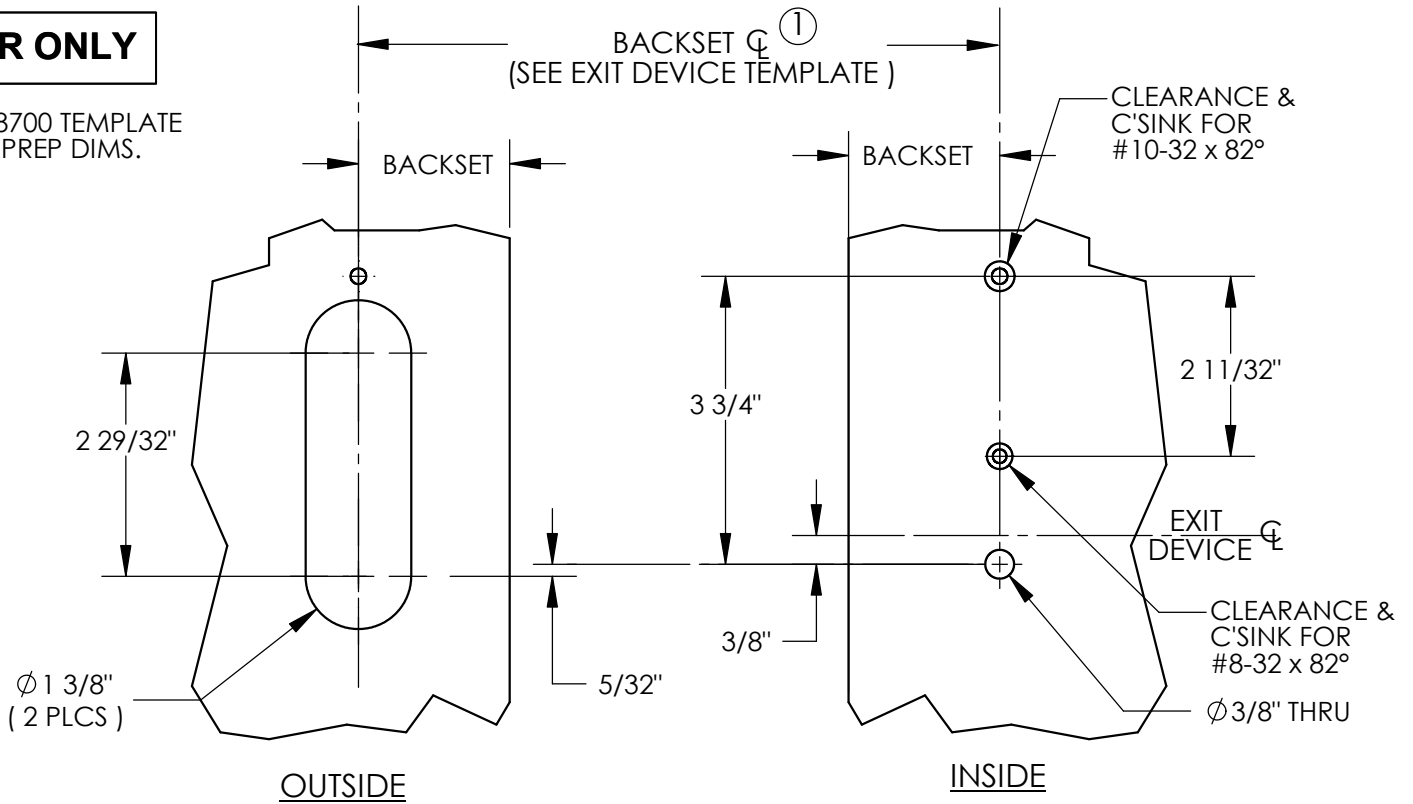

RHR ONLY

* SEE 8700 TEMPLATE FOR PREP DIMS.

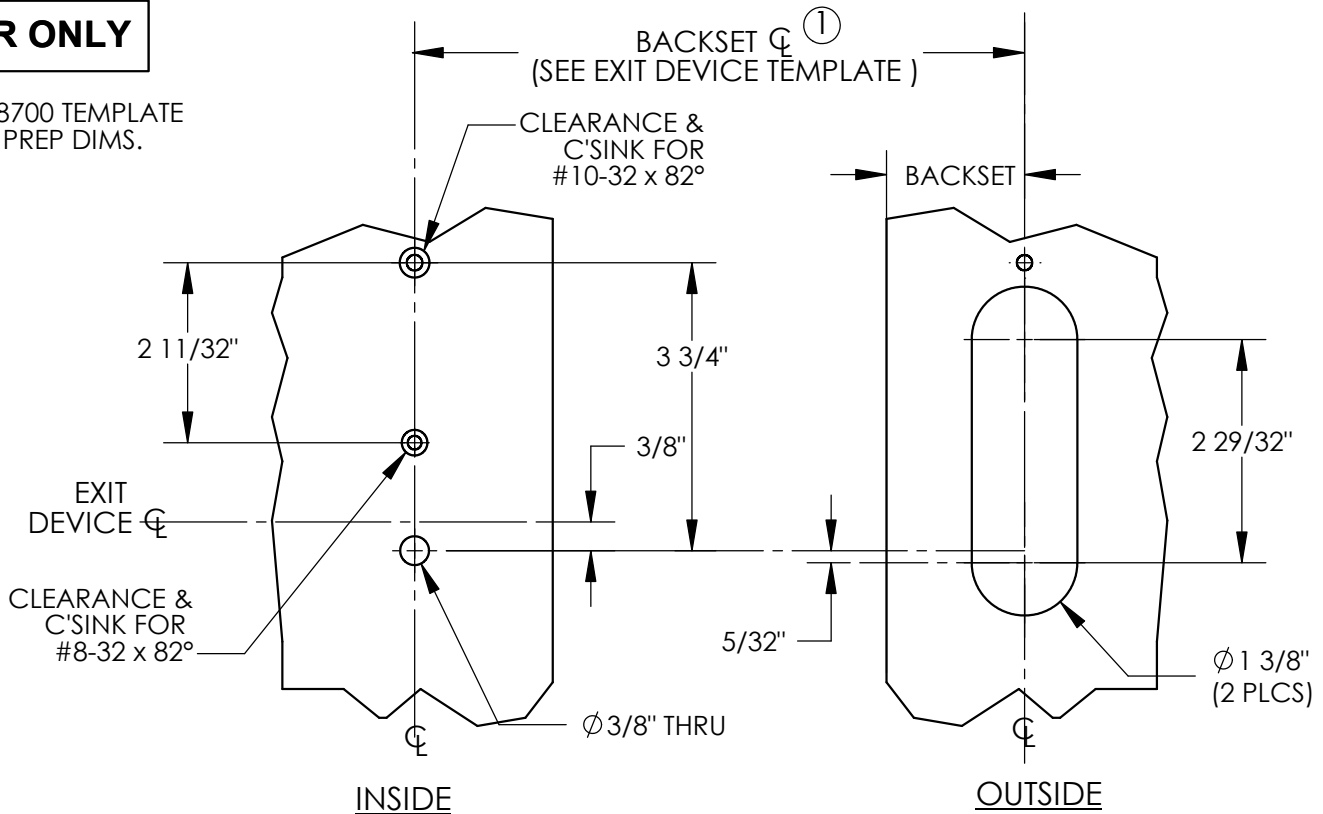

**8066 ENTRY FUNCTION FOR 8700 RIM EXIT
HOLLOW METAL DOOR PREPARATION**

NOTE:
SEE MASTER SHEET 10001 FOR
SUGGESTED REINFORCEMENT

TEMPLATE NO.: 20136-1

DATE: 03/08/04



**ADAMS RITE
MANUFACTURING CO.**

260 Santa Fe Street, Pomona, CA 91767
Phone: (909) 632-2300 Fax: (909) 632-2369